



S2
ULTIMATE

OWNER'S MANUAL



INTRODUCTION

ABOUT NHK S2 ULTIMATE SERIES

HELMET SPECIFICATION

HELMET PARTS DESCRIPTION

1. AIR VENTS / VENTILATION SYSTEM

2. SUN VISOR *

3. VISOR / SHIELD

4. RETENTION SYSTEM (STRAP) *

- MICROMATIC BUCKLE

5. NHK HELMET INNER LINING

- CHEEK PADS
- CROWN PAD



*) Please check your production series, some model might be different.

*) If you have any inquiry, please send your email to : info@nhkhelmet.com

INTRODUCTION


Thank you for purchase of your new **NHK S2 ULTIMATE** helmet. This helmet has been designed and created to be modern, futuristic and high performing product. This NHK helmet is made possible by the helmet design, its ergonomic, comfort and aerodynamic properties as well as its practical and easy to use controls. **NHK S2 ULTIMATE** bring the new racing technology into daily urban style

Please read this manual carefully before use and keep it for future reference. This manual contains valuable information to help you understand all the function of manual contains valuable information to help you understand all the function of the product and the instructions how to use your NHK helmet for more safety and comfortable use.

ABOUT NHK S2 ULTIMATE SERIES

NHK S2 ULTIMATE is one of our stylish street helmet that equipped with dual visor technology and also long rear spoiler. **NHK S2 ULTIMATE** is created with Smart Advanced Thermo Polymer Shell that comes with comfortable inner lining system for maximum air vent system, cool feeling and safety.

HELMET SPECIFICATION

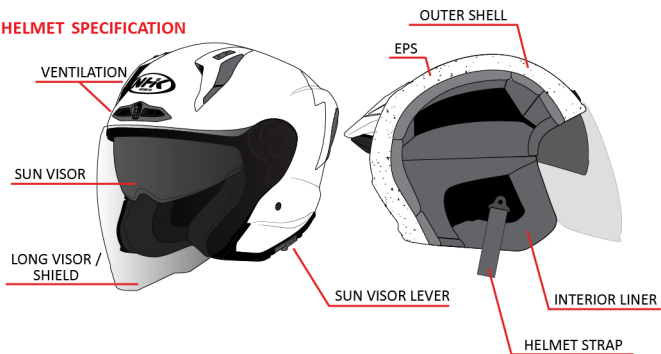

This **NHK S2 ULTIMATE** is available in 4 different comfort size with 2 inner shells. This chart is only for reference. Always try the helmet on and follow this manual's instructions for a proper fit. These are available size for **NHK S2 ULTIMATE** series :


OUTER SHELL 1 SIZE (ABS)				
INNER SHELL	M		L	
HELMET SIZE	S	M	L	XL
HEAD	55-56 CM	57-58 CM	59-60 CM	61-62 CM
CIRCUMFERENCE	21.65-22.05 INCH	22.44 -22.83 INCH	23.23 - 23.62 INCH	24.02 - 24.41 INCH

HELMET PARTS DESCRIPTION

1. AIR VENTS / VENTILATION SYSTEM

NHK S2 ULTIMATE helmet has been designed with a good circulated air ventilation flow

- Top Vent air intake (left and right) distribute fresh air to the top part of the head. And the ventilation come whit new technology, which are called **TELESCOPIC SYSTEM** you can adjust the air circulation that enters the helmet from 0% - 100%

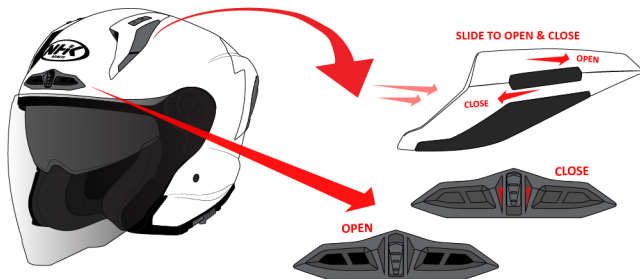


- NHK S2 ULTIMATE rear side vents

The back of this helmet is designed with a **DUAL ACTIVE EXHAUST VENTILATION SYSTEM**, so that the air circulation inside the helmet is cooler and keeps your scalp healthy. (Red arrow)

3D CIRCULAR MODE, The shell shape of the NHK S2 Ultimate Series is specially designed with a 3D CIRCULAR MODE shape where the curved dimensions of the shell function to break the wind and increase the Drag Reduction Stabilizer (DRS). (Blue arrow)



2. SUN VISOR SWITCH / LEVER*

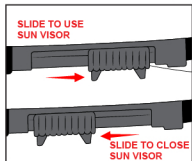

NHK S2 ULTIMATE equipped with Double Visor Technology To ensure extra comfort for the biker during daylight to reduce the sun brightness. This double visor switch design to be comfort and easy to use. To lower the sun visor you may switch the lever to back, and to raise the sun visor, you can slide the switch to front.

3. VISOR / SHIELD

This **NHK S2 ULTIMATE** equipped with long visor shield that makes your helmet looks more elegant and sharp.

WARNING!

If the visor is damaged or deeply scratched causing reduced visibility, this means that the protective treatment is probably damaged so the visor need to be replaces. The Visor can be used for the intended helmet model only. Do not paint or apply any stickers on your visor.

To Open Your Main Visor :

- Open the visor by pressing your thumb up on the visor lever until it snaps open.
- Lift visor all the way up.

To Close Your Main Visor :

- Close the visor by sliding it down all the way and pressing the visor lever until it snaps shut.

OPEN


CLOSE




Visor Stopper

• How To Remove NHK S2 ULTIMATE Visor


- Slide up the visor until completely open (Picture 1)
- Please make sure the visor and ratchet are in the right position (Picture 1)
- Push the trigger lever together (left and right) on the ratchet (Picture 2 & 3)
- Pull out the visor together (left and right) until released from the ratchet (Picture 4)
- Remove the visor safely from the helmet (Picture 5)

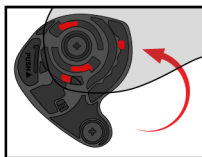

Picture 1

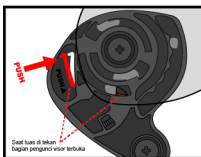


Picture 2

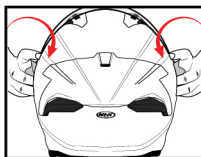

Picture 3




Picture 4

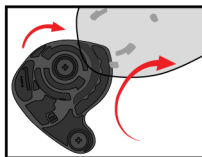


Picture 5

• How To Install NHK S2 ULTIMATE Visor


- Place the visor hook on the ratchet. Please make sure visor, bracket and hook are in the right track position (Picture 1)
- Do the same on the other side (Picture 2)
- Press both sides of visor together (Picture 3)
- Press and then slide the visor down until the visor closed (Picture 4)
- Try to slide the visor up and down to make sure the visor installed correctly (Picture 5)

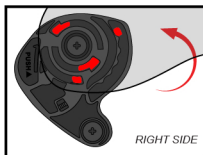

Picture 1

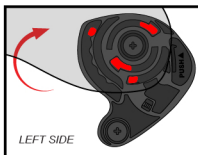


Picture 2

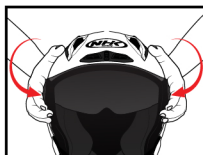

Picture 3




Picture 4

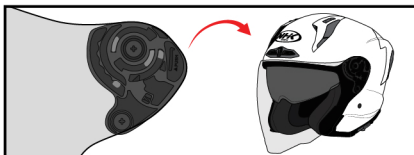

Picture 5

4. RETENTION SYSTEM (CHINSTRAP) *

• Micromatic Buckle Strap :

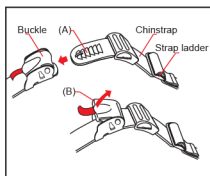

- To fasten the strap, push the long tongue firmly into the buckle until it locks with a click. Pull chinstrap tight against your throat and the end of chinstrap ladder to secure it.
- To release the chinstrap, lift up the red lever and then release the lock.

5. NHK HELMET INNER LINING

NHK S2 ULTIMATE inner liner made with ultra soft micro fiber material. With the most comfort inner lining system, we bring you a completely new development in regards to; noise reduction, ventilation, and fitment. The innovative soft mesh material forms around the curves of your head, this way the material does not only feels soft on your skin but also stays firmly placed. To clean your interior padding, use only mild soap and water to wash the interior of your helmet. Never allow your helmet to come in contact high chemical liquid. Do not use washing machine and hot water to clean and wash.

• CHEEK PADS & CROWN PAD

Sometimes some part of helmet inner lining may require removal for washing or replacement.

How To Remove Cheek Pads :


- Put your fingers behind the cheek pads
- Gently tug the cheek pads away from the helmet interior wall
- There are 3 snaps that require unsnapping. At the same time slide the plastic trim out the helmet grip
- Do the same on the other side

How To Remove Crown Pad :

- Remove the cheek pads
- From the back side of the helmet, pull the crown pad away from the shell
- Then pull the crown pad out of the helmet gently

How To Install Cheek Pads and Crown Pad :

- To re-install cheek pads and crown pad please reverse this process.

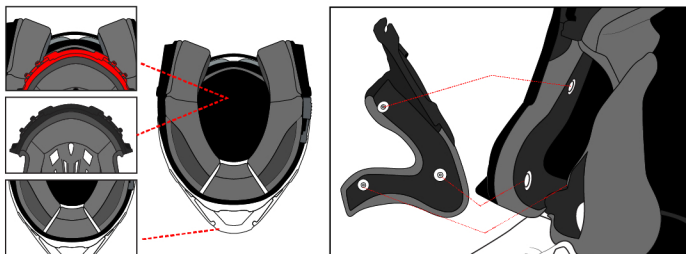

WARNING!

No helmet can protect the user from all possible and foreseeable impacts. However, for adequate protection, this NHK helmet must fit closely and the retention system must be securely attached. The helmet shall not easily removed when its fitted and fastened. Do not apply paint, substances and any other solvent to this helmet. Helmet can be seriously damaged. To maintain full efficiency of the helmet, please do not make any modification on helmet parts and structure. If the helmet has experience a severe impact the helmet should be replaced.



SCAN ME

www.NHKhelmet.com